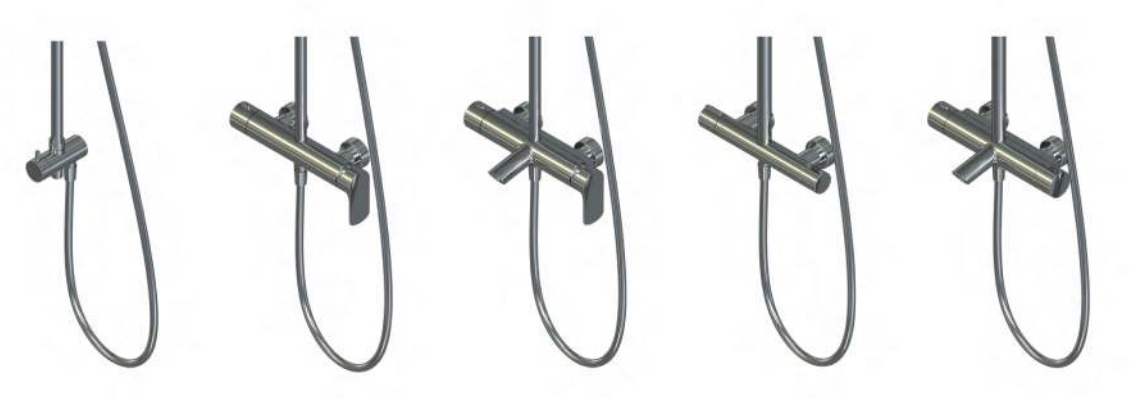
Villeroy & Boch
1748

Shower System

General Instruction
Villeroy & Boch





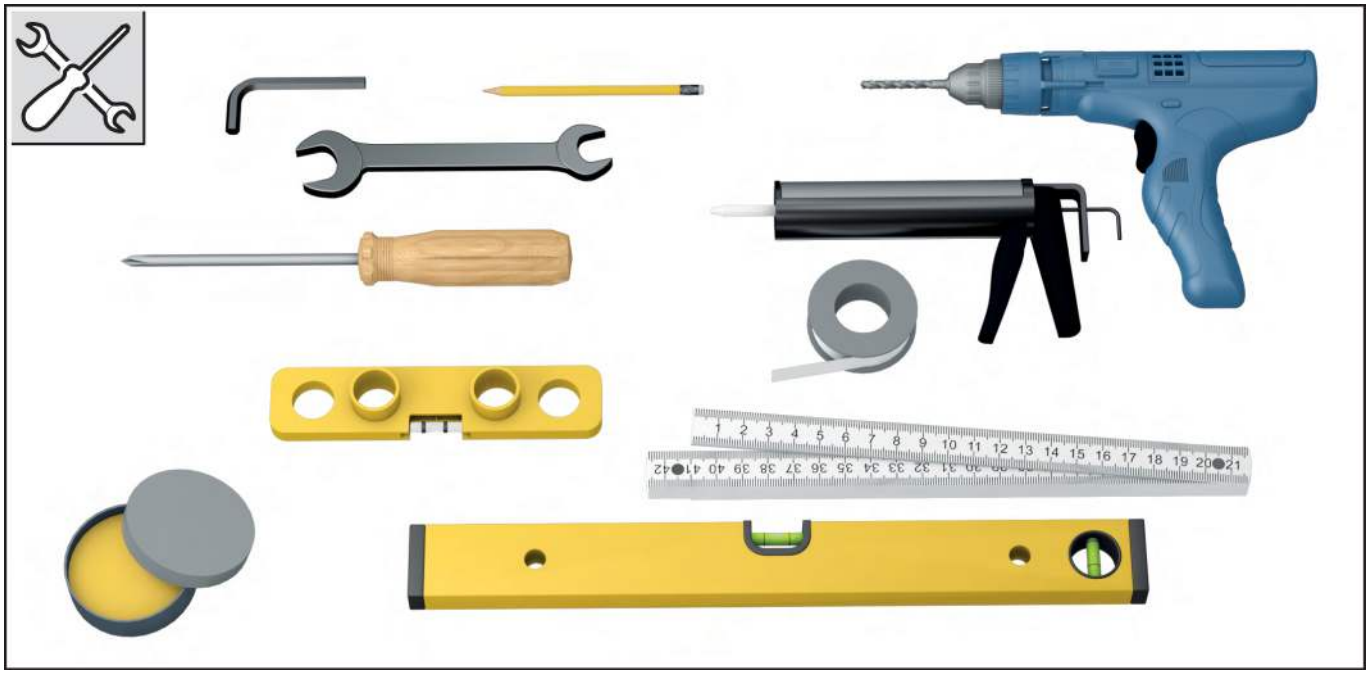
DE Montageanleitung
EN Installation instructions
ES Instrucciones de montaje
FR Instructions de montage
IT Istruzioni per il montaggio
NL Montagehandleiding
RU Инструкция по монтажу
ZH 安装说明

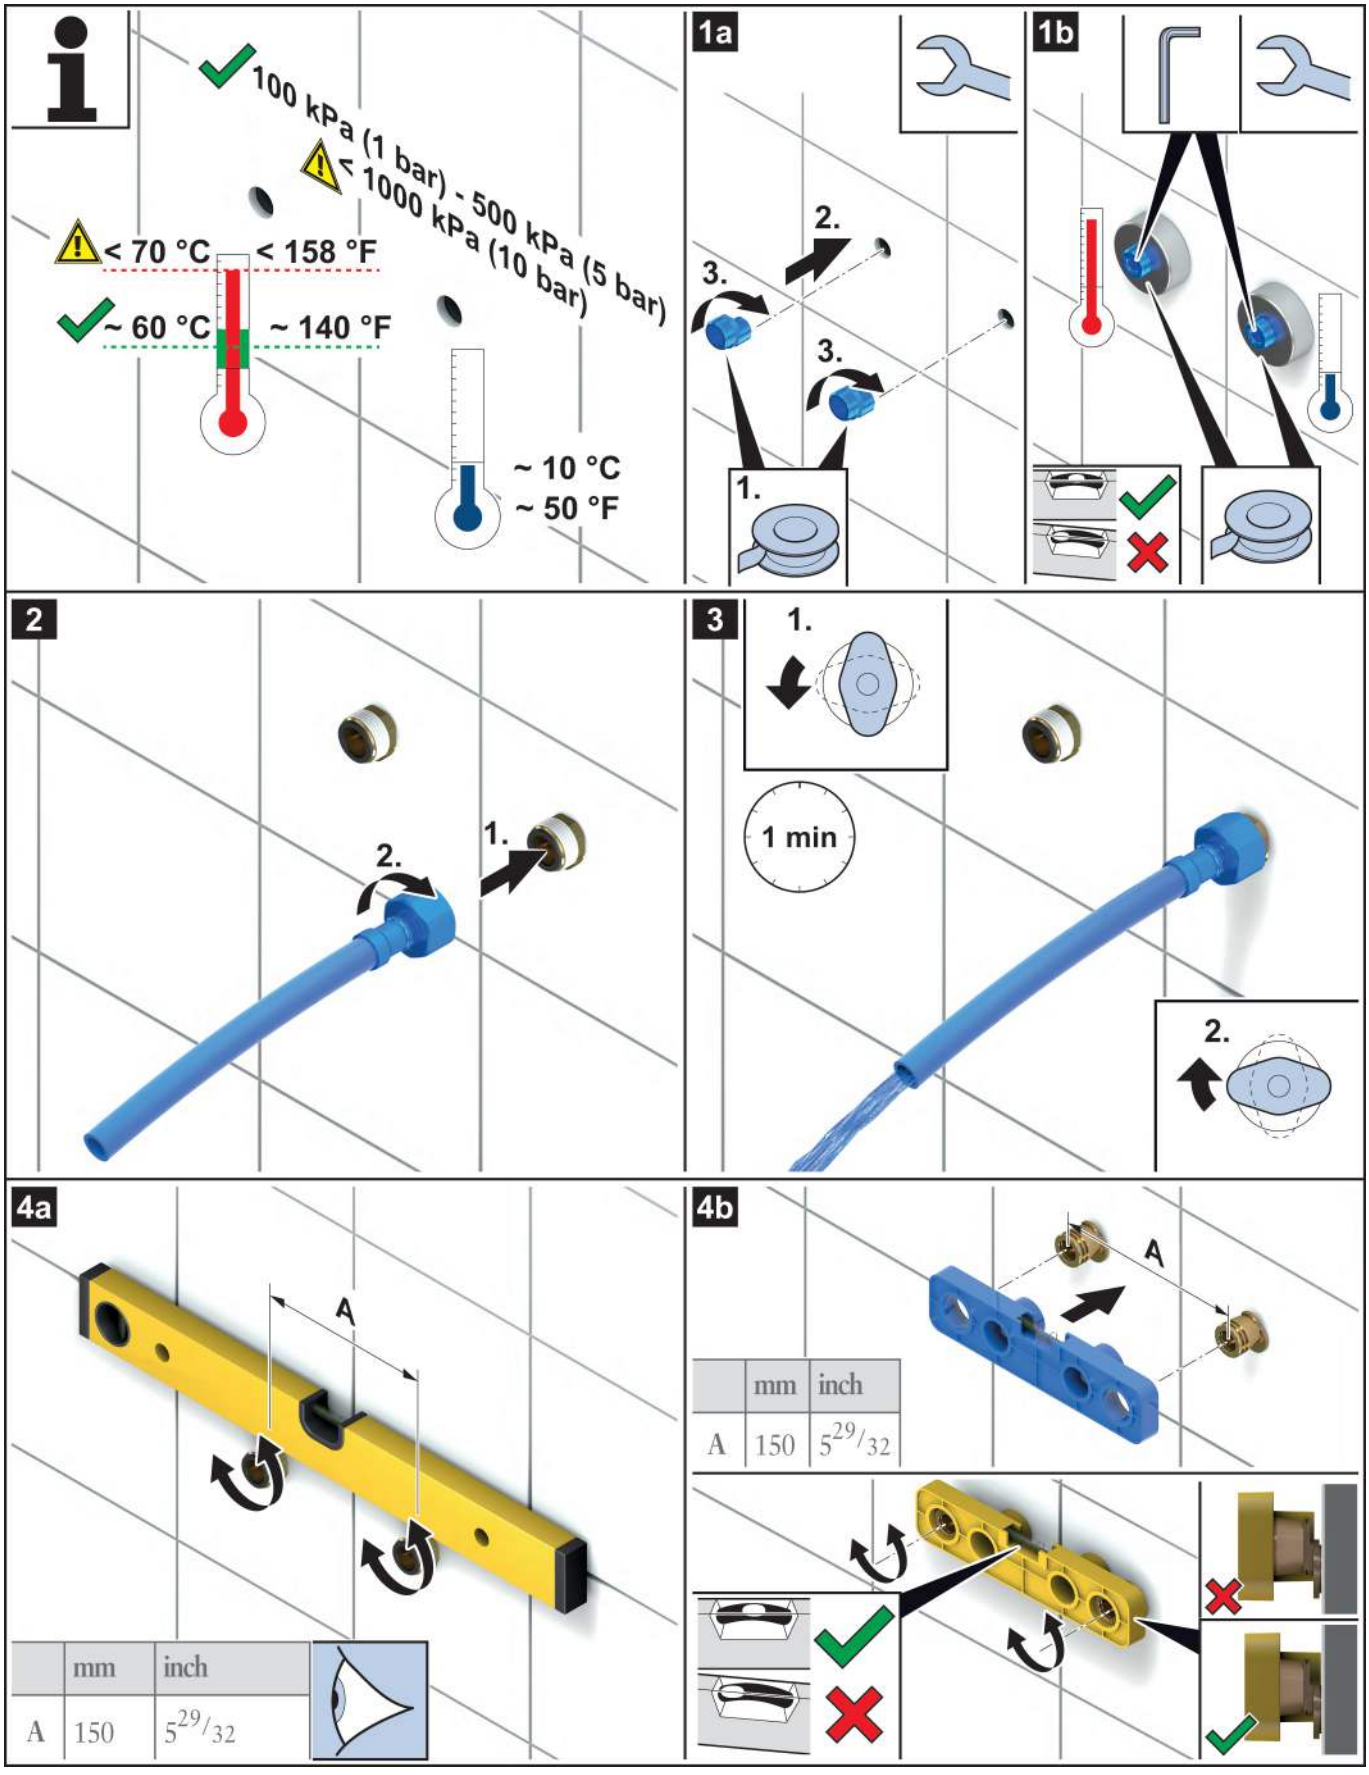
AR دليل التركيب
BG Ръководство за монтаж
CS Návod k montáži
DA Monteringsvejledning
ET Paigaldusjuhend
EL Οδηγίες τοποθέτησης
FI Asennusohje
HR Uputa za montažu

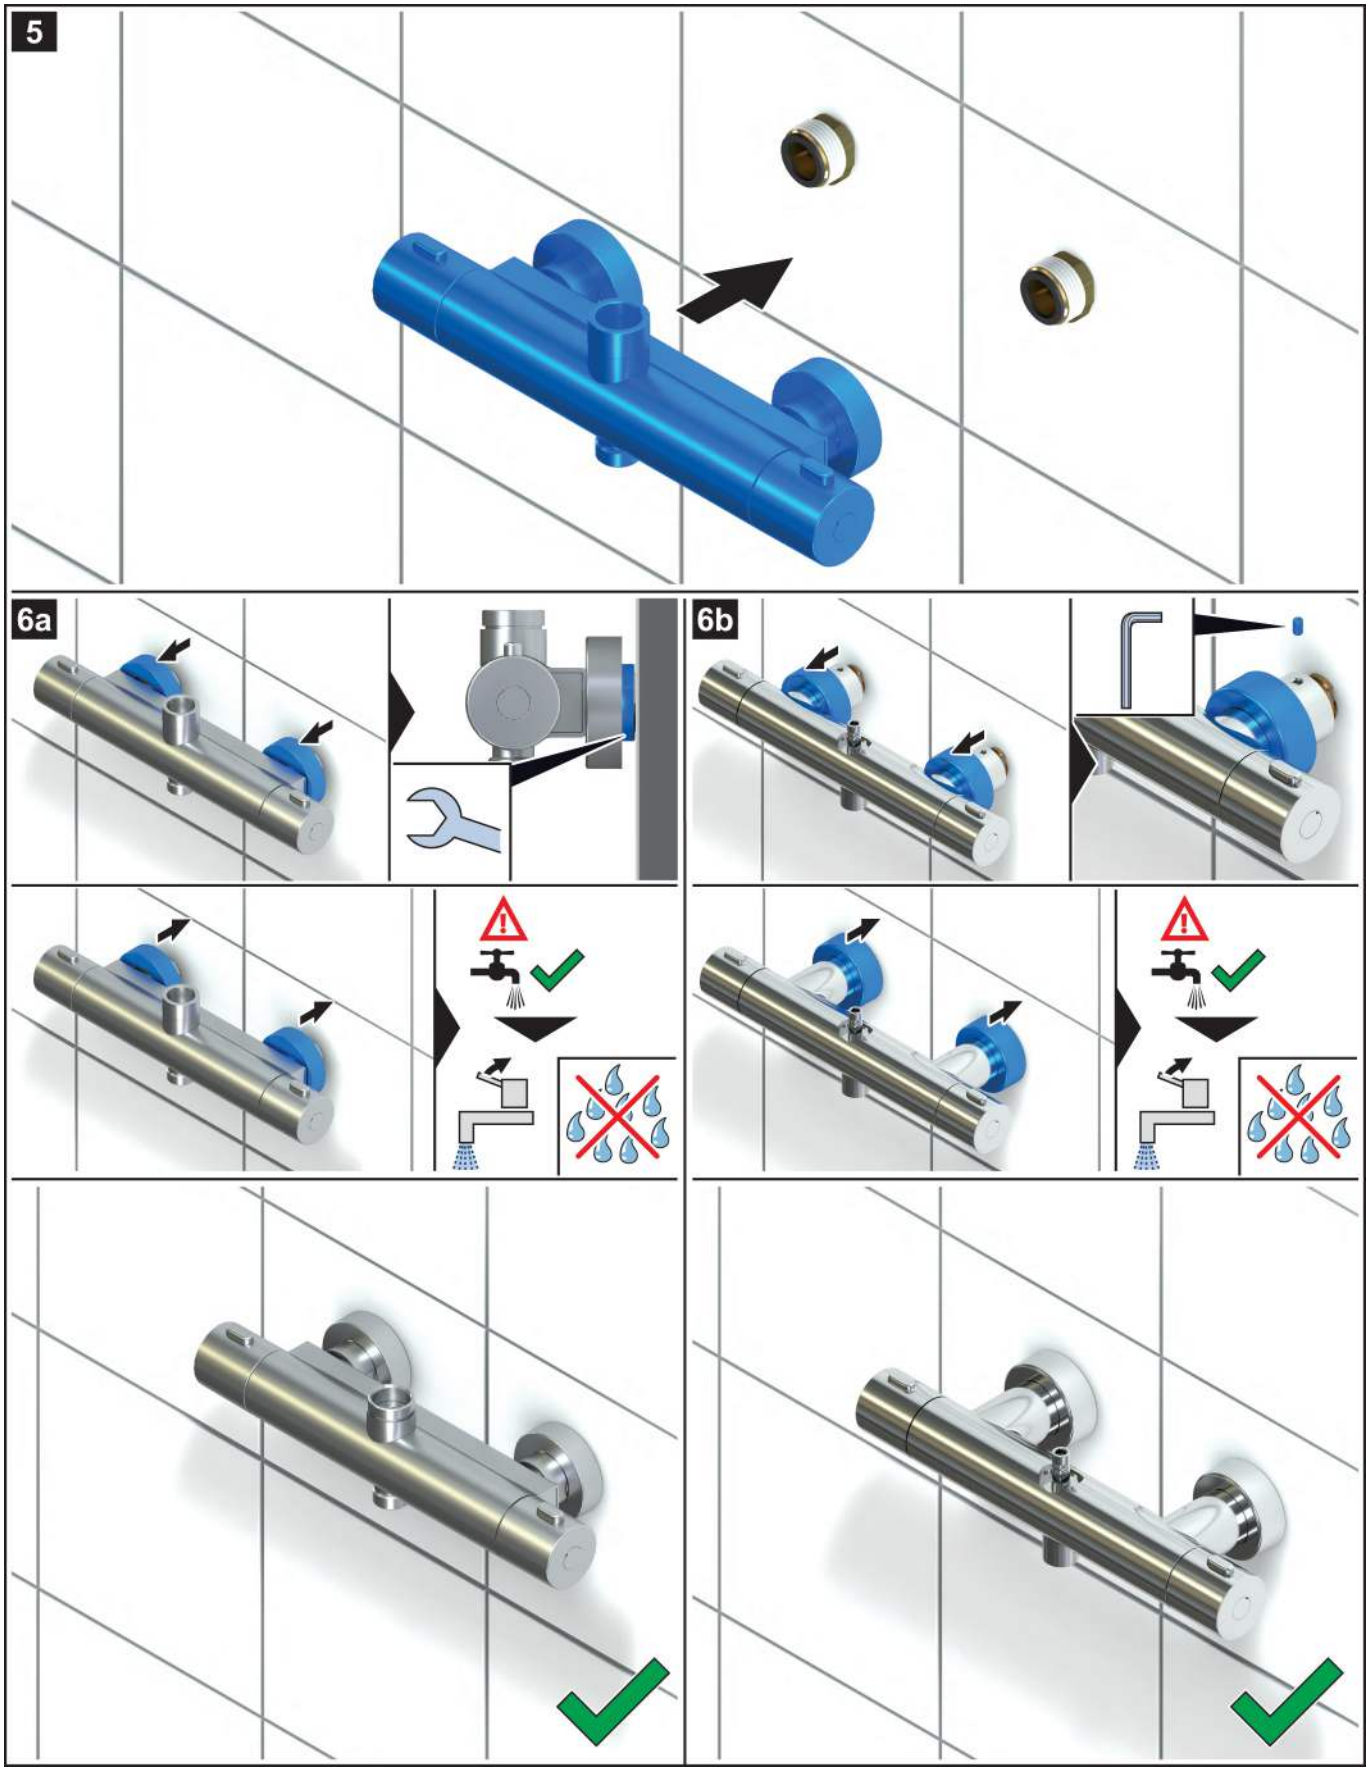
HU Szerelési útmutató
ID Petunjuk pemasangan
JA 取付説明書
KO 설치 가이드
LT Montavimo instrukcija
LV Montāžas instrukcija
NO Monteringsanvisning
PL Instrukcja montażu

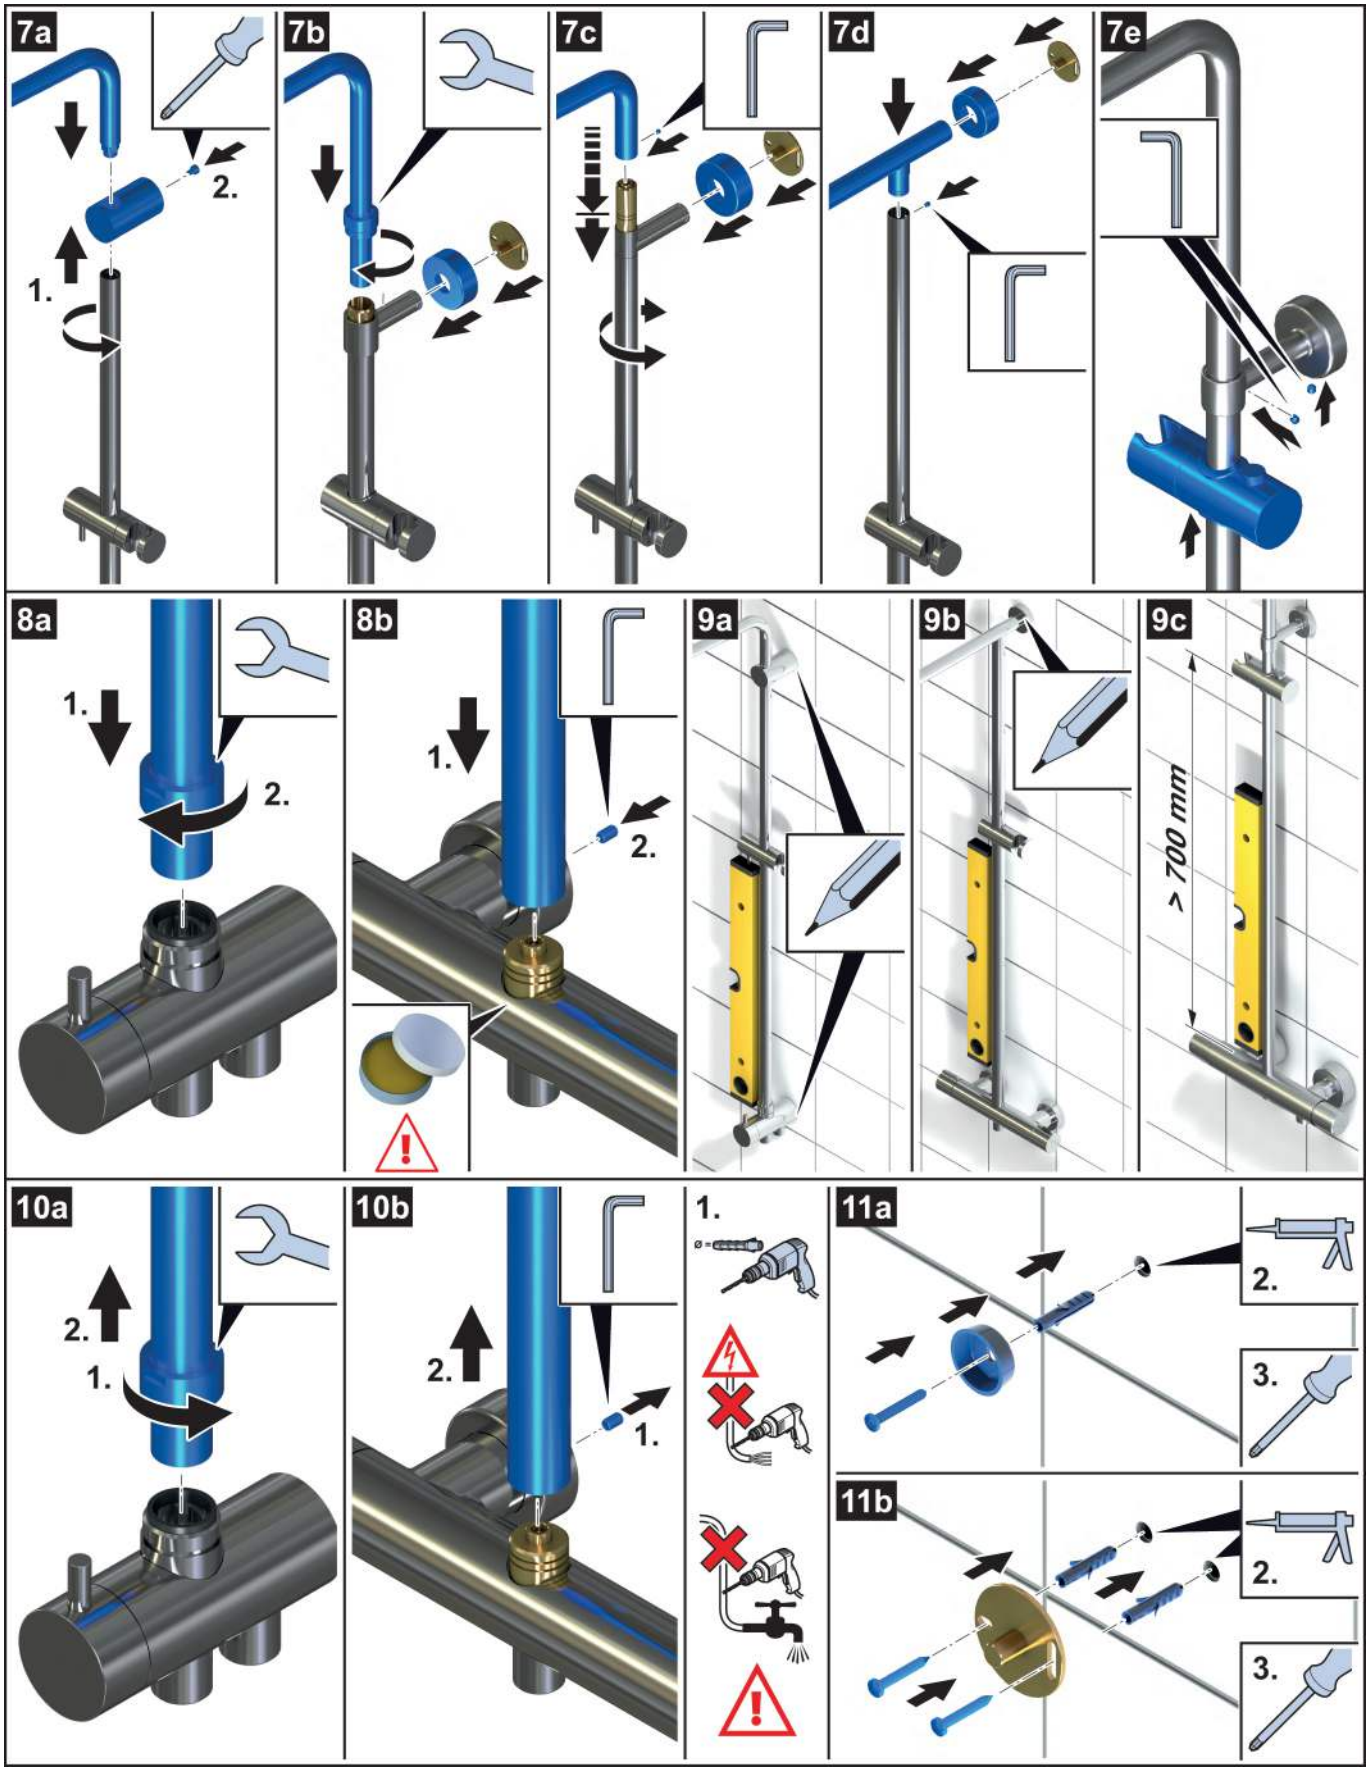
PT Instruções de montagem
RO Manual de montaj
SK Návod na montáž
SL Navodila za montažo
SV Monteringsanvisning
TH คู่มือการติดตั้ง
TR Montaj kılavuzu
UK Інструкція з монтажу

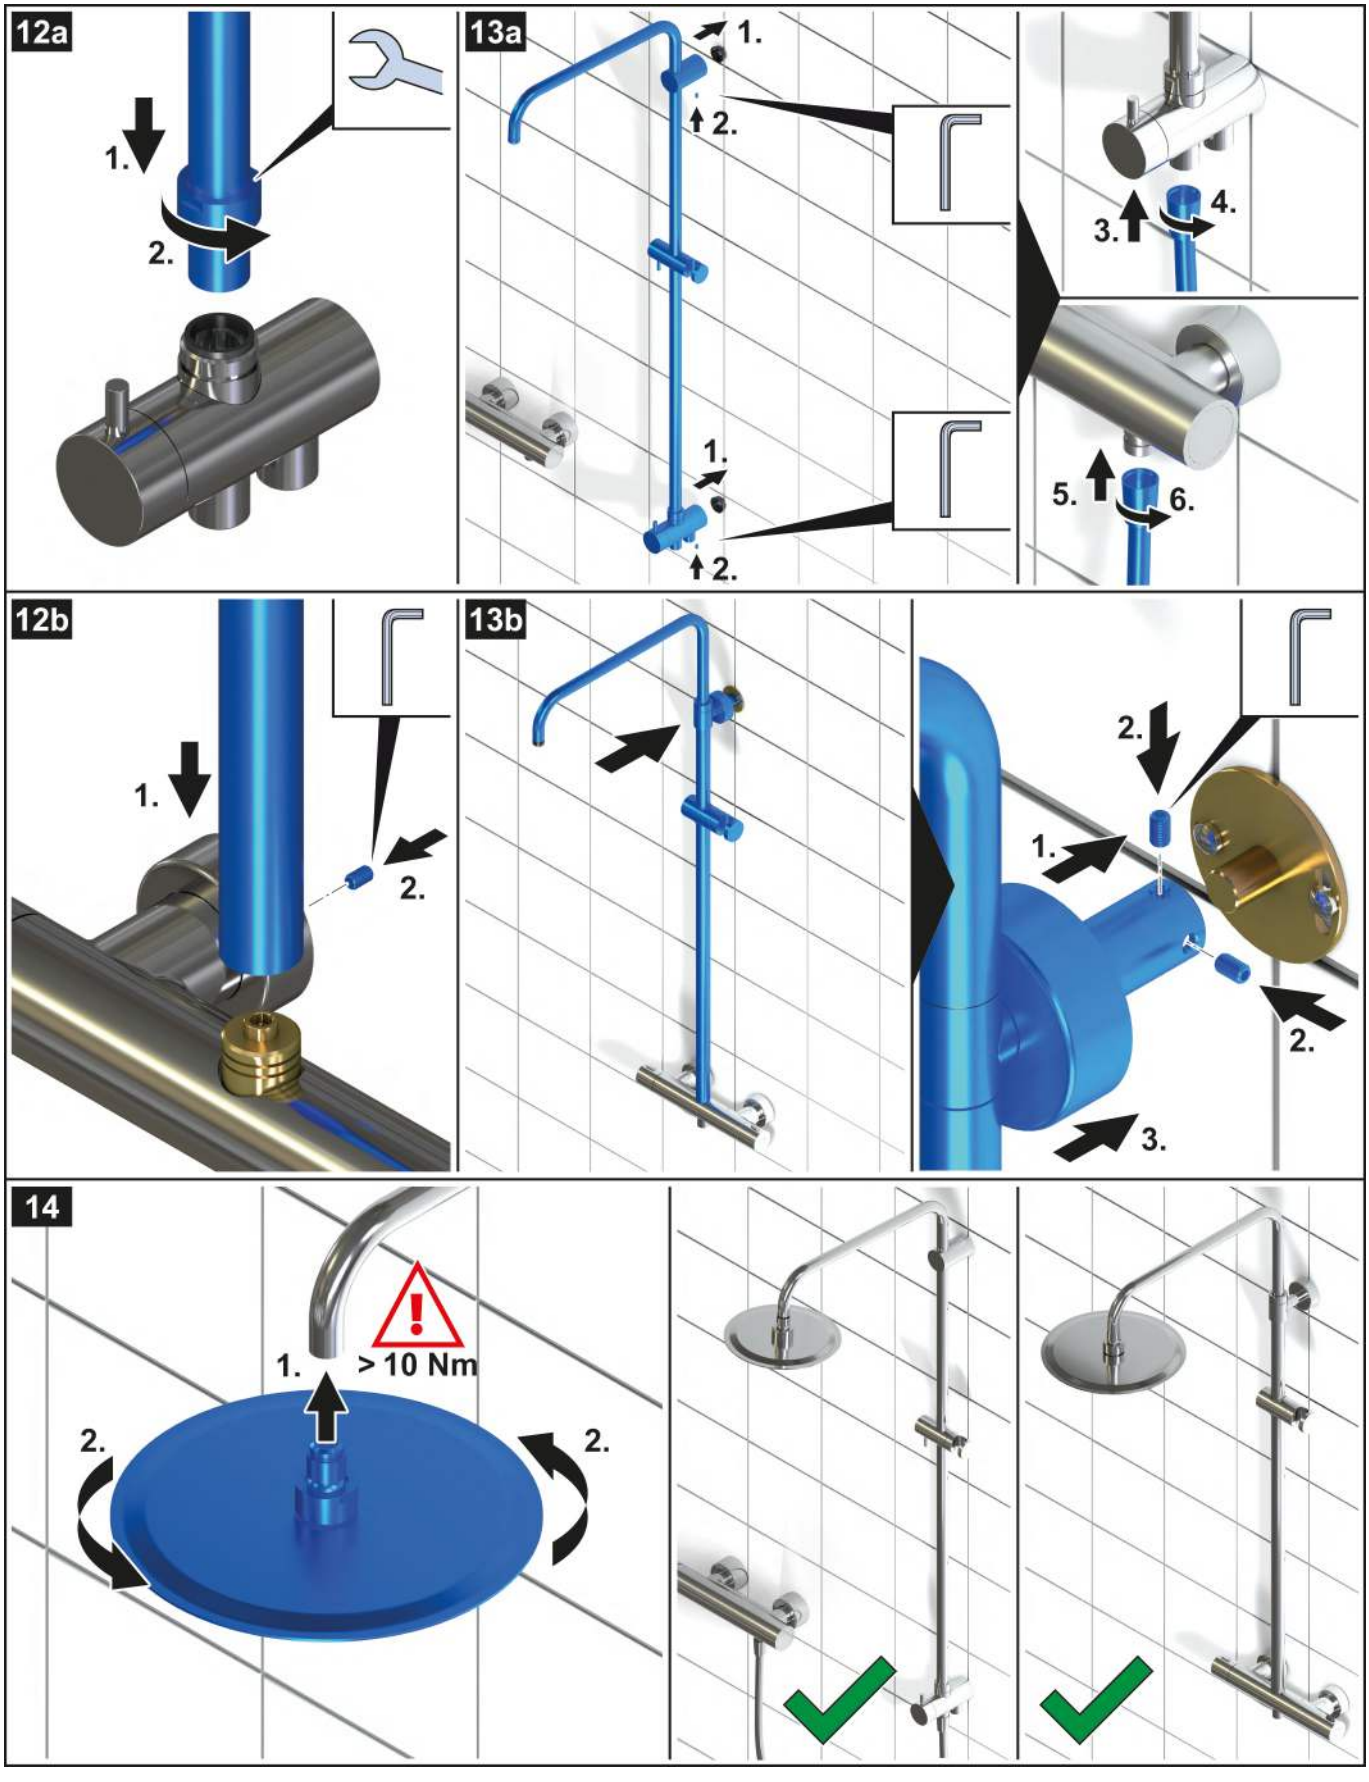
M.VILLEROY-BOCH.COM

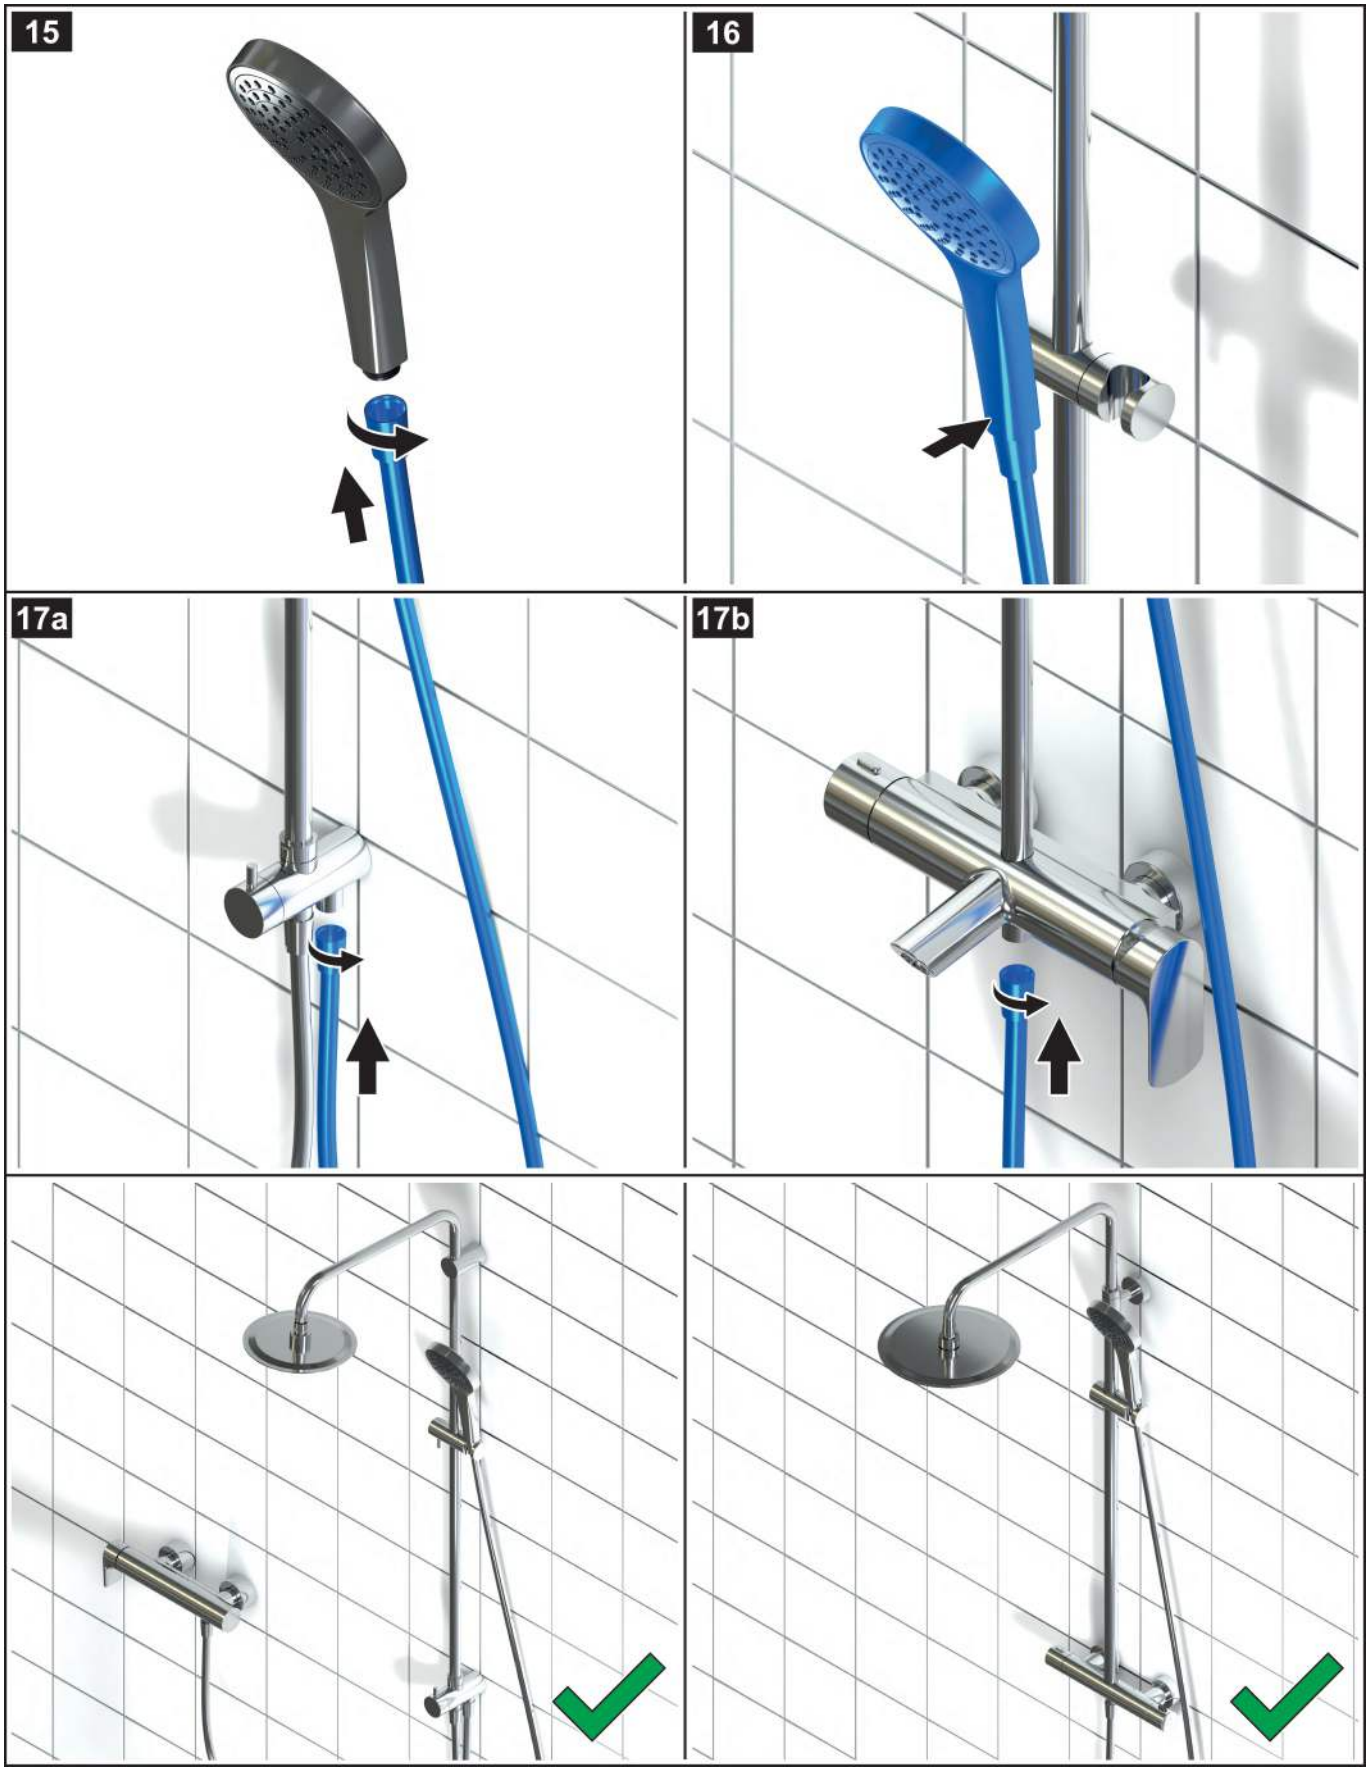


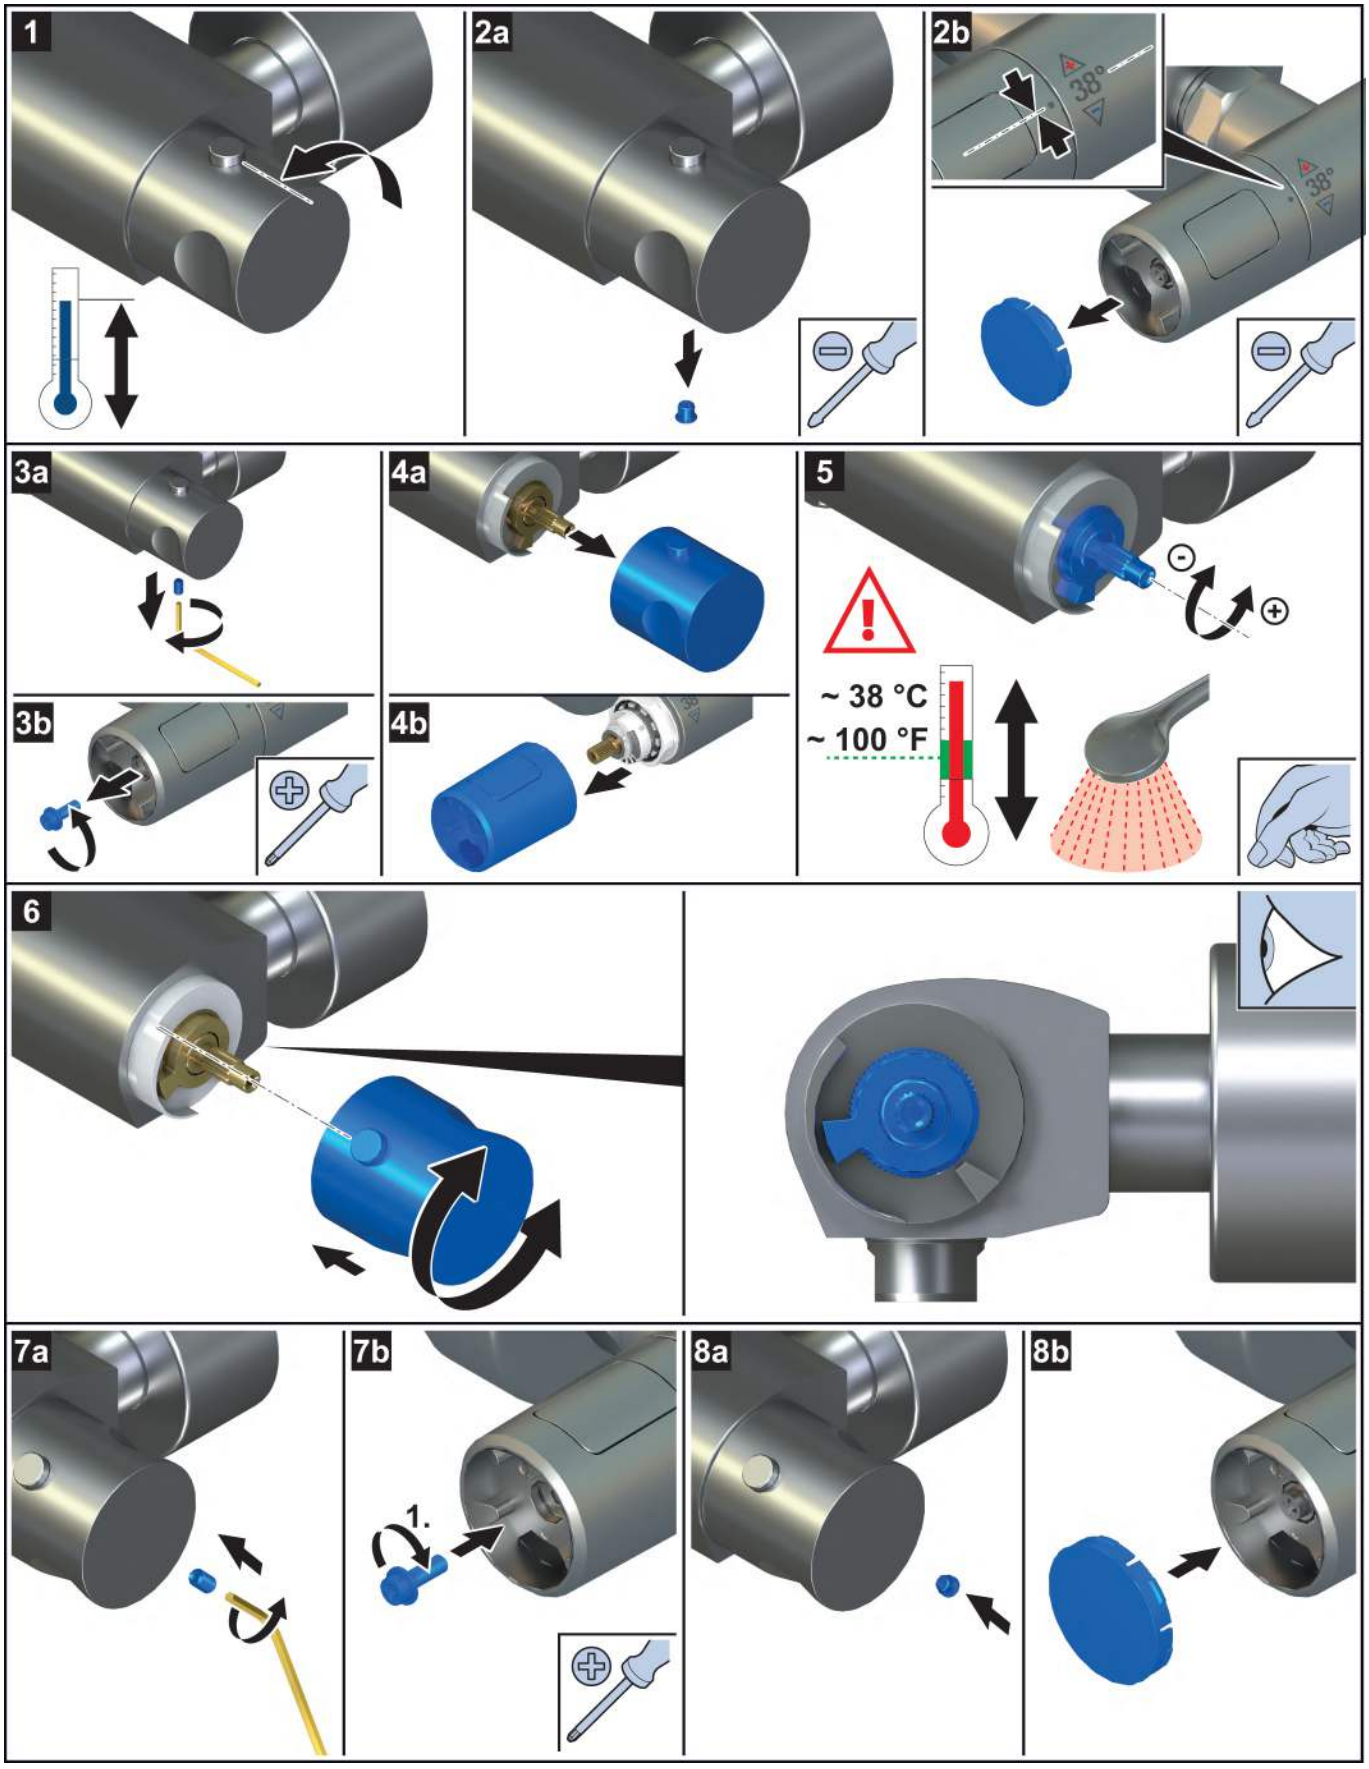

100 kPa (1 bar) - 500 kPa (5 bar)
< 1000 kPa (10 bar)
< 70 °C
< 158 °F
~ 60 °C
~ 140 °F
~ 10 °C
~ 50 °F
1a
1b
2.
3.
3.
1.
2
2.
1.
3
1.
1 min
2.
4a
A
mm
inch
A
150
5 29/32
4b
A
mm
inch
A
150
5 29/32

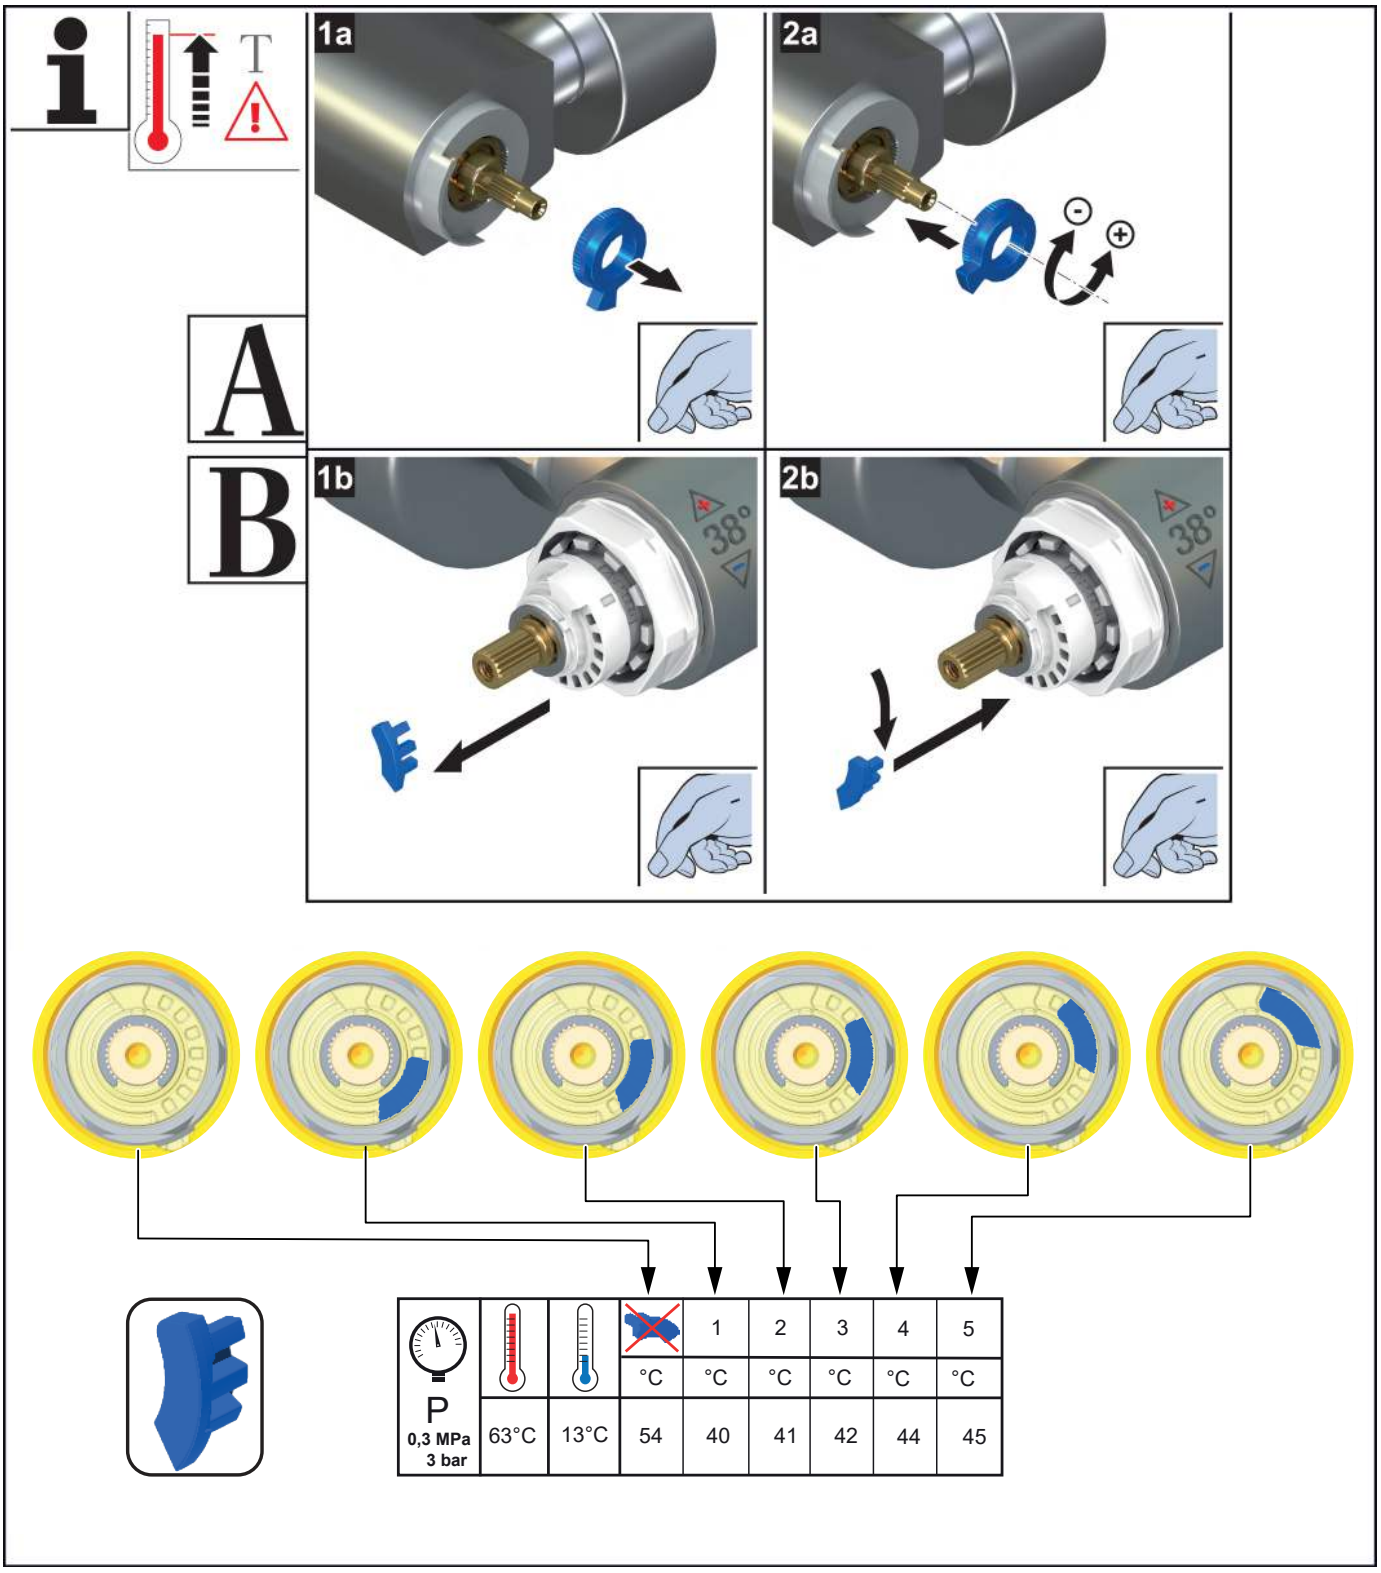

5
6a
6b


7a
1.
2.
7b
7c
7d
7e
8a
1.
2.
8b
1.
2.
9a
9b
9c
> 700 mm
10a
2.
1.
10b
2.
1.
1.
11a
2.
3.
11b
2.
3.

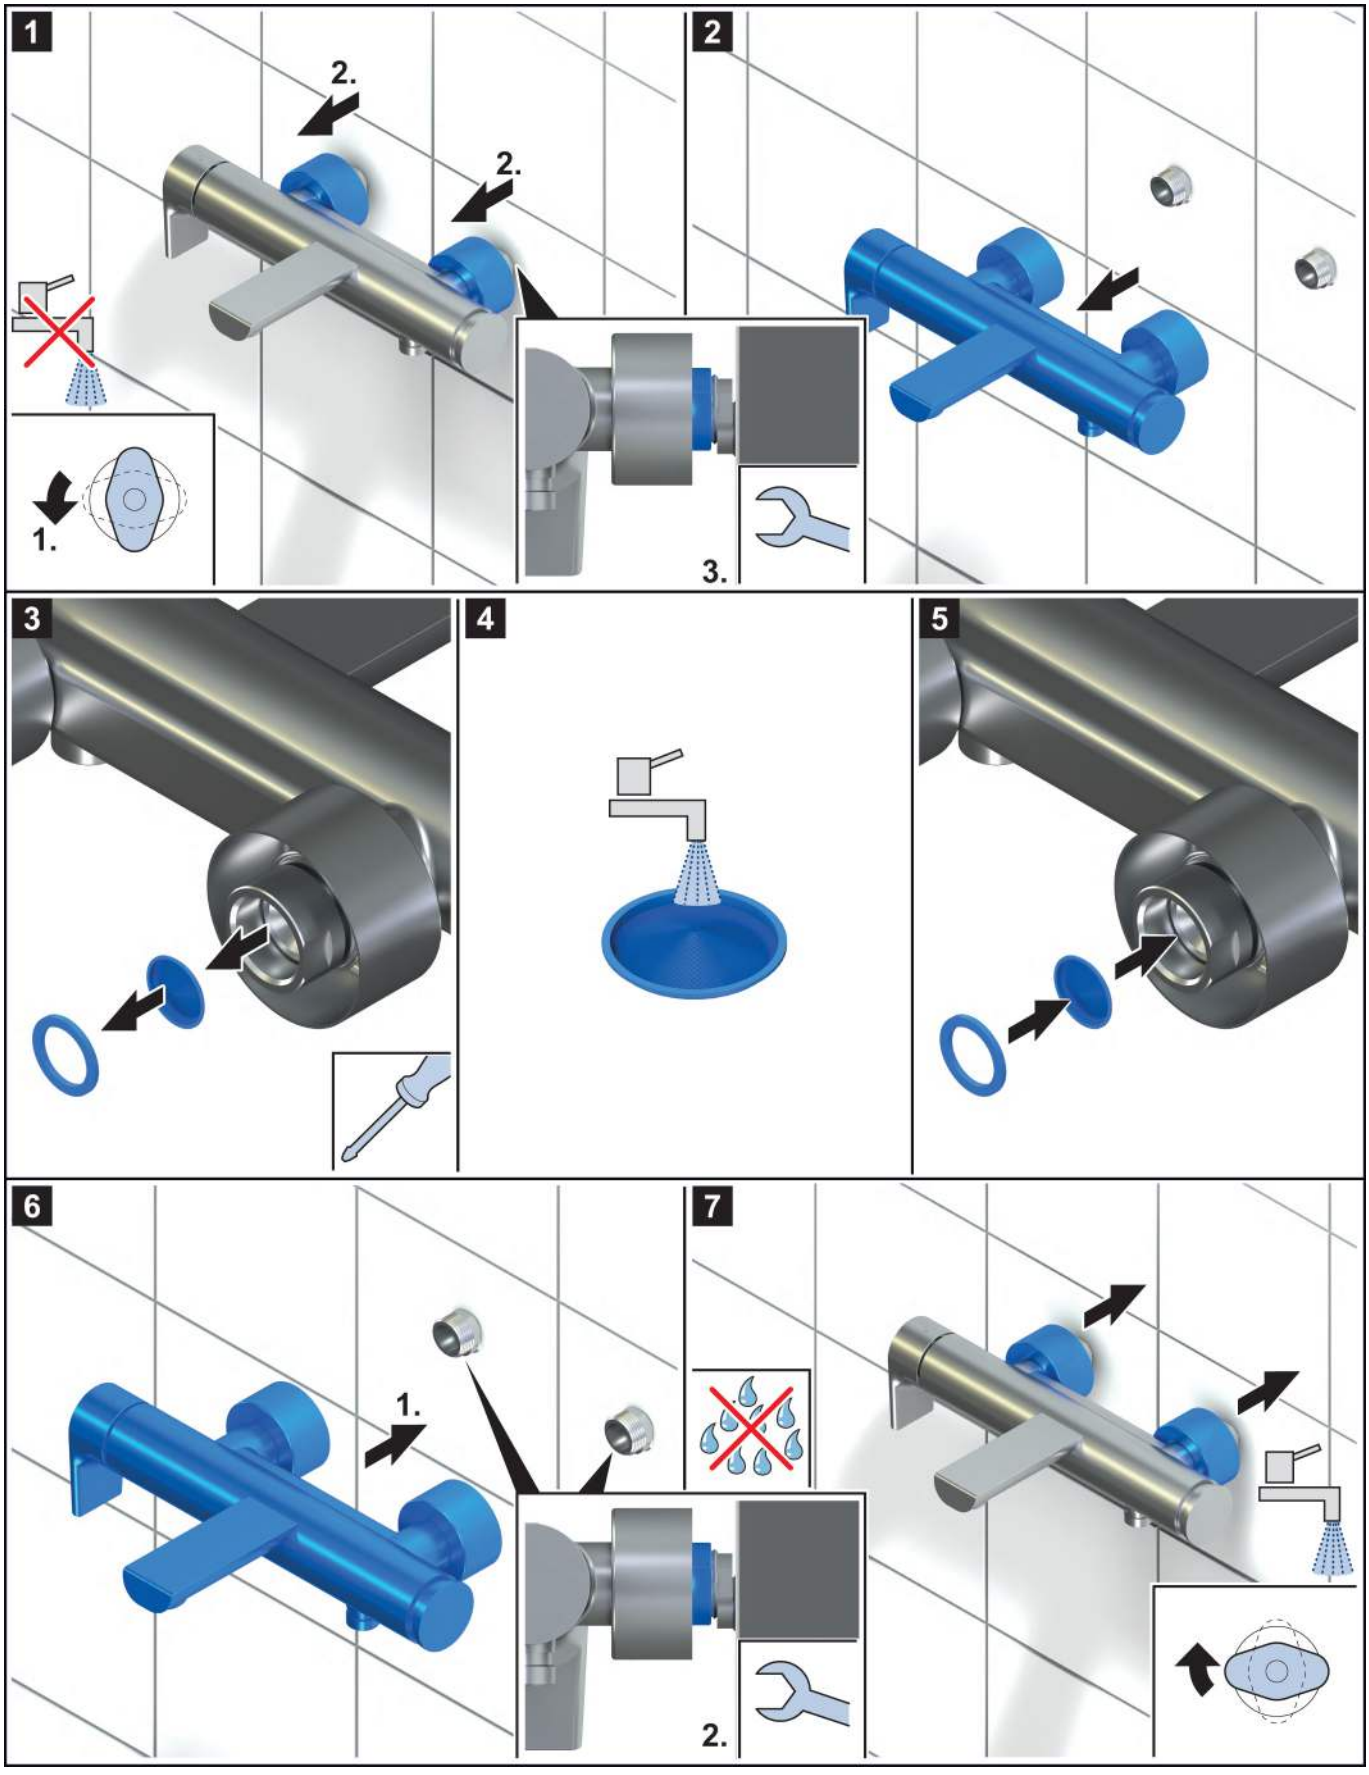

12a
1.
2.
13a
1.
2.
1.
2.
3.
4.
5.
6.
12b
1.
2.
13b
1.
2.
3.
14
1.
> 10 Nm
2.
2.

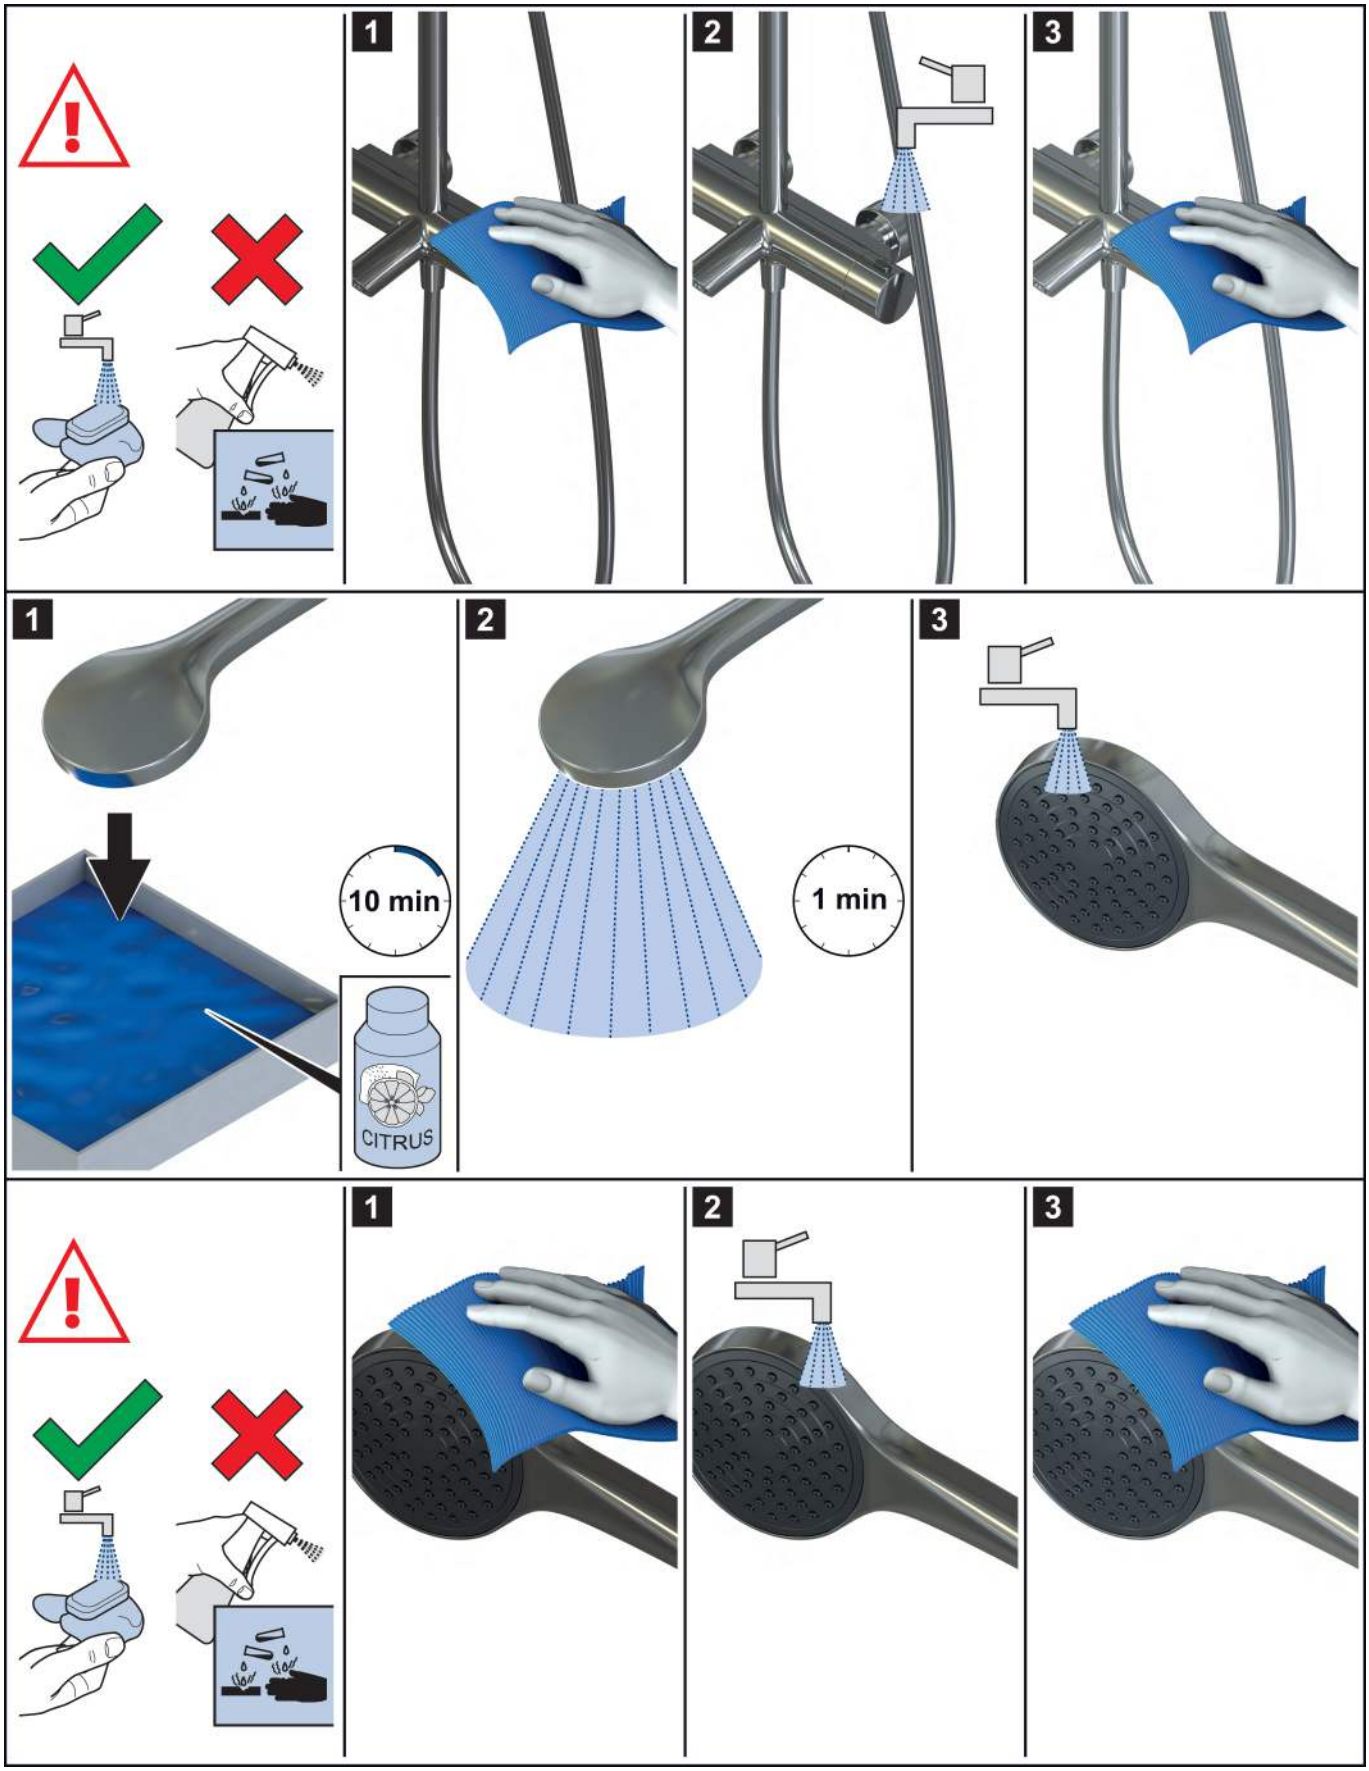

15
16
17a
17b

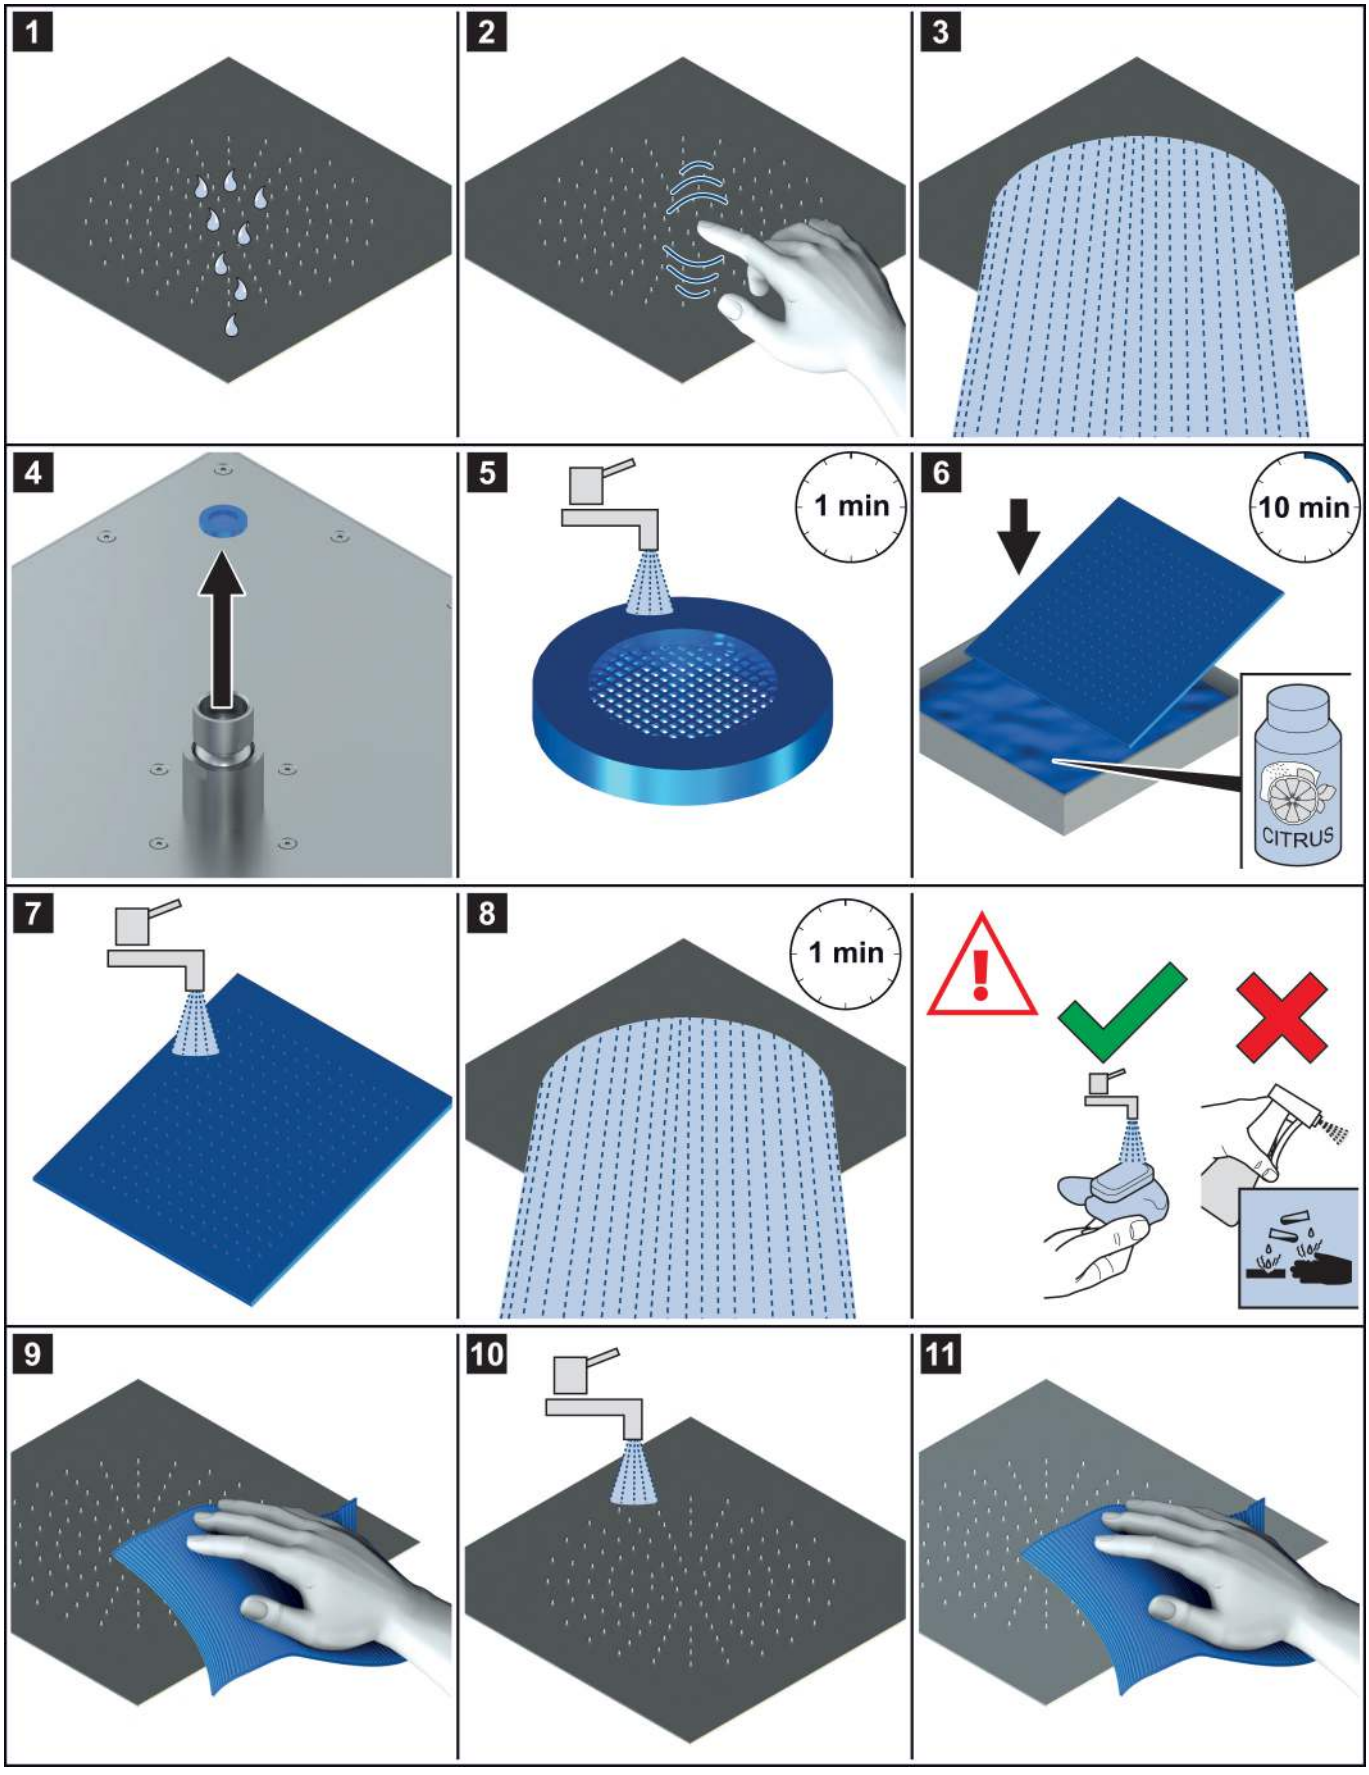

1
2a
2b
38°
38°
3a
3b
4a
4b
5
~ 38 °C
~ 100 °F
6
7a
7b
1.
8a
8b

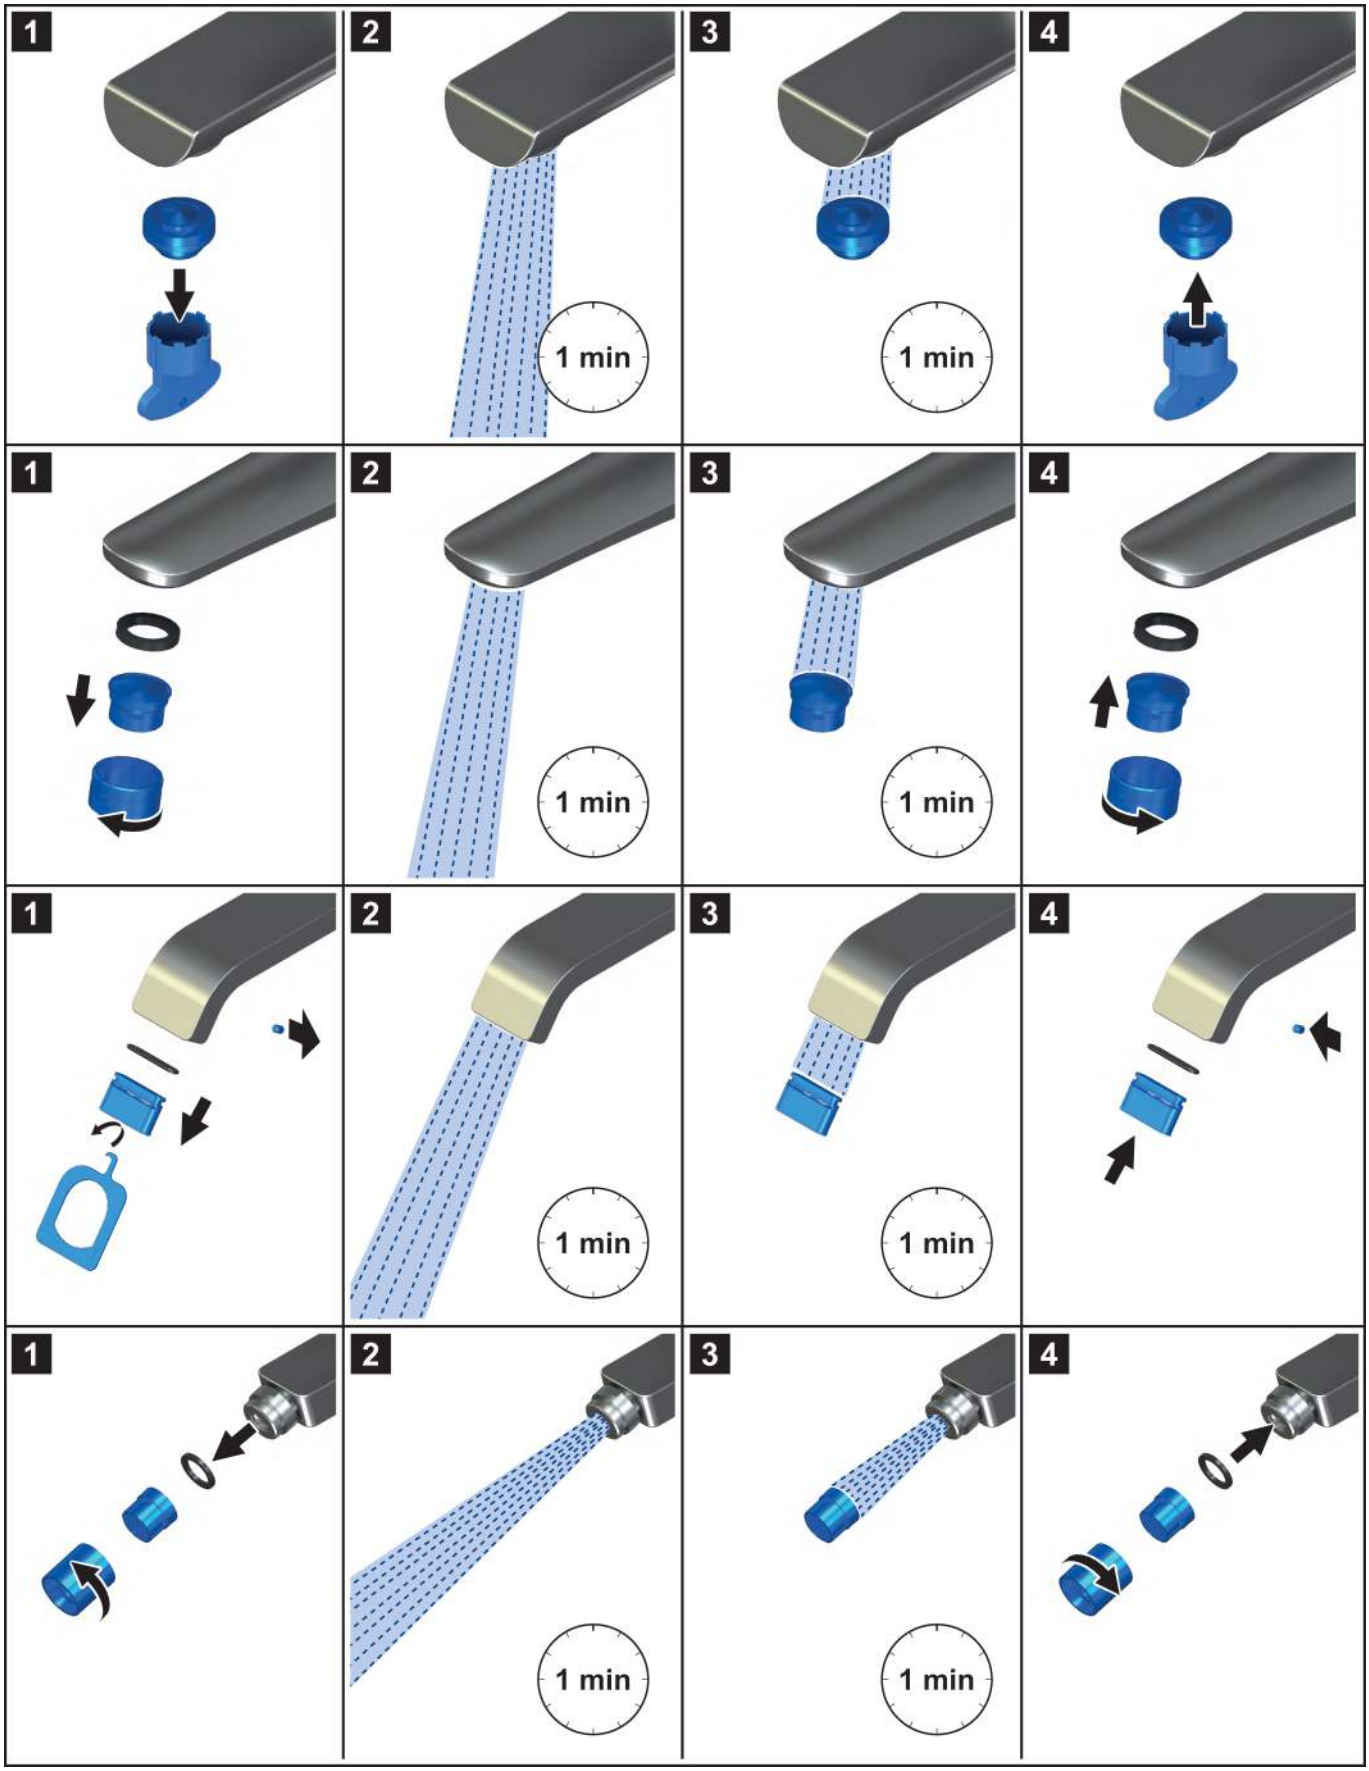


P 0,3 MPa 3 bar				1	2	3	4	5
			°C	°C	°C	°C	°C	°C
	63°C	13°C	54	40	41	42	44	45


1
2.
2.
1.
2
3.
3
4
5
6
1.
2.
7


1
2
3
1
2
3
10 min
1 min
CITRUS
1
2
3


1
2
3
4
5
1 min
6
10 min
CITRUS
7
8
1 min
9
10
11


1
2
1 min
3
1 min
4
1
2
1 min
3
1 min
4
1
2
1 min
3
1 min
4
1
2
1 min
3
1 min
4

VILLEROY & BOCH

GERMANY

Villeroy & Boch AG
Bathroom and Wellness Division
Headquarters
66693 Mettlach
Germany

Tel: +49 (0) 68 64 / 81 0
Fax: +49 (0) 68 64 / 81 1484

921102D3 / A869197// 2024

Shades and dimensions subject to the usual tolerances. We reserve the right to make technical modifications to the range and alter colours.