
Produced since: **Jan. 2026**

Pre-installation Kit 1 - **A1000NU**

Body and Designparts Kit 2 :
chrome **A8709AA**
silk black **A8709XG**

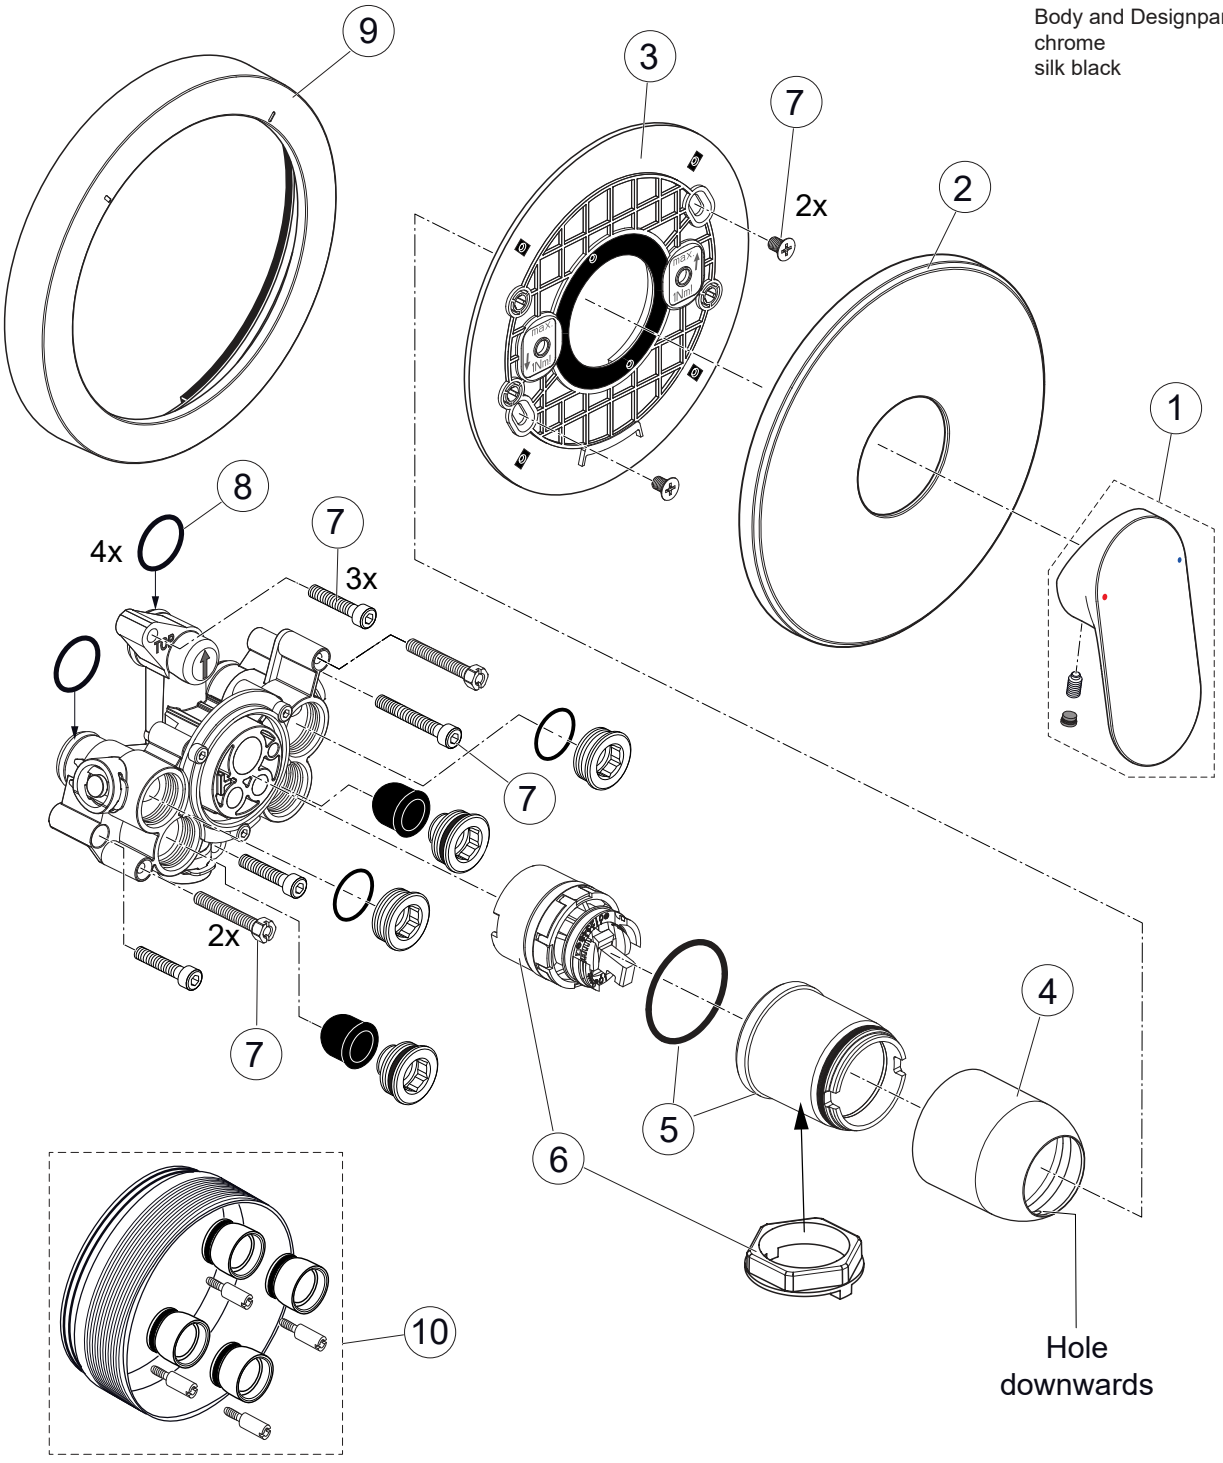

Replace XX with the appropriate finish code
Chrome = AA Silk Black = XG

Example spare part order:
A 861 880 AA in Chrome

Pos.	Description	Part-Number	Qty.
1	Lever cpl.	**B 961 980 XX**	1 Set
2	Escutcheon Shower Ø157	**A 861 857 XX**	1 pcs
3	Escutcheon holder cpl.	**A 861 876 NU**	1 Set
4	Cover cap	**A 861 880 XX**	1 pcs
5	Screw ring Ø38 cartridge	**A 861 874 NU**	1 Set
6	Cardridge Ø38 with key	**A 861 500 NU***	1 Set
7	Screw set complete	**A 960 890 NU***	1 Set
8	O-ring Ø17x2,5	**A 963 143 NU**	4 pcs
9	Distanzframe 10mm	**A 7851 XX**	1 Set
	Distanzframe 20mm	**A 7877 XX**	1 Set
10	Extension kit 20mm	**A 960 704 NU**	1 Set
	Extension kit 40mm	**A 962 476 NU**	1 Set

**Universal set (not all parts needed)*